


9.1 分解圖、零件表

PARTS LIST

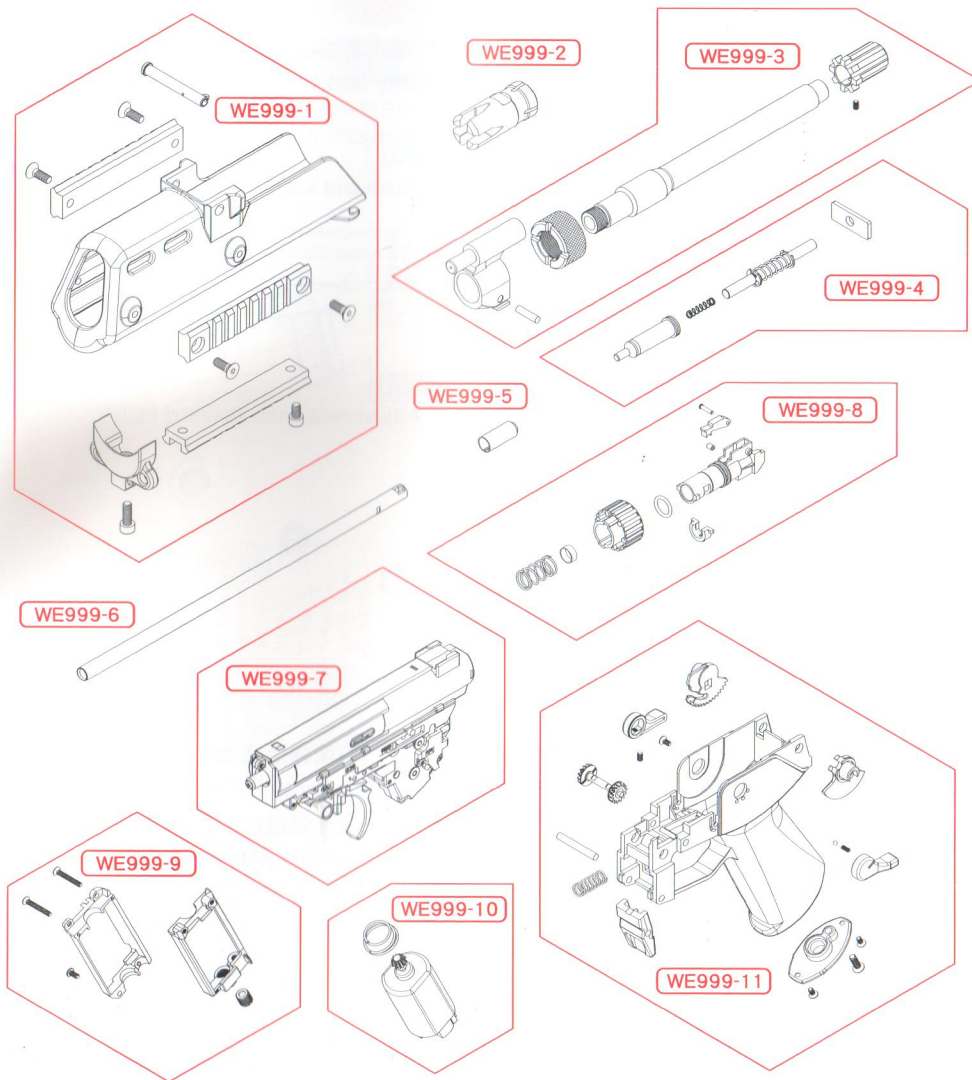


| NO. | 品名 Parts name |
|---------|---------------------------|
| WE999-1 | 護木組 Handguards Set |
| WE999-2 | 防火帽 Flash Hider |
| WE999-3 | 槍管組 Barrel Set |
| WE999-4 | 瓦斯活塞桿組 Gas Piston Rod Set |
| WE999-5 | 上旋系統橡皮 Hop-Up Rubber |
| WE999-6 | 內槍管 Inner Barrel |

| NO. | 品名 Parts name |
|----------|----------------------|
| WE999-7 | 齒輪箱組 Gear Box Set |
| WE999-8 | 上旋系統組 Hop-Up Set |
| WE999-9 | 馬達座組 Motor Frame Set |
| WE999-10 | 馬達組 Motor Set |
| WE999-11 | 下槍身 Lower Receiver |

9.2 分解圖、零件表

PARTS LIST

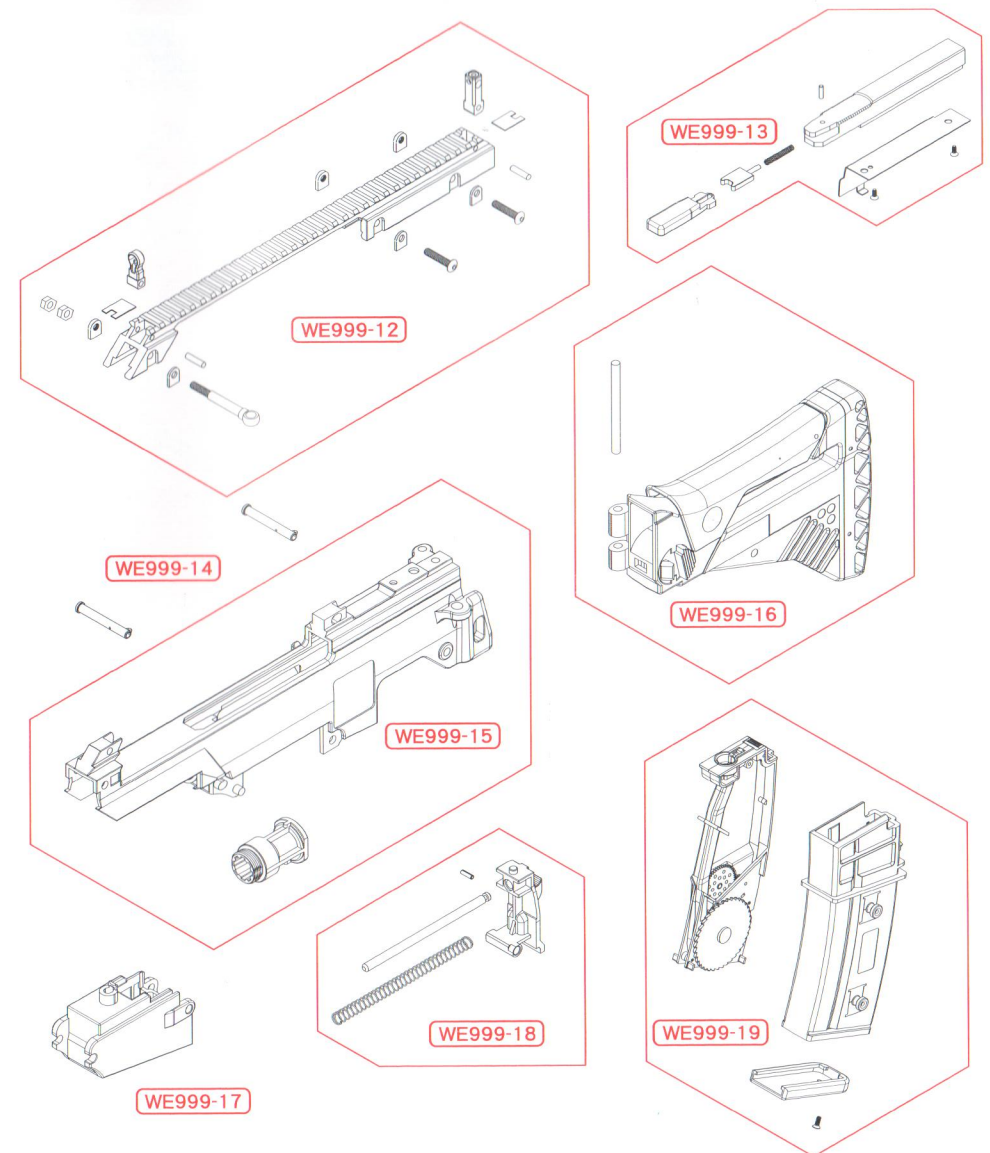


| NO. | 品名 Parts name |
|----------|-----------------------------|
| WE999-12 | IDZ瞄具軌道組 IDZ Sight Rail Set |
| WE999-13 | 槍機組 Bolt Set |
| WE999-14 | 插梢組 Push Pin Set |
| WE999-15 | 上槍身組 Upper Receiver Set |

| NO. | 品名 Parts name |
|----------|------------------------------|
| WE999-16 | IDZ托組 IDZ Folding Stock |
| WE999-17 | 彈匣井 Magazine Well |
| WE999-18 | 覆進簧座組 Recoil Rod Housing Set |
| WE999-19 | 470發彈匣 470rd Magazine |

9.3 分解圖、零件表

PARTS LIST

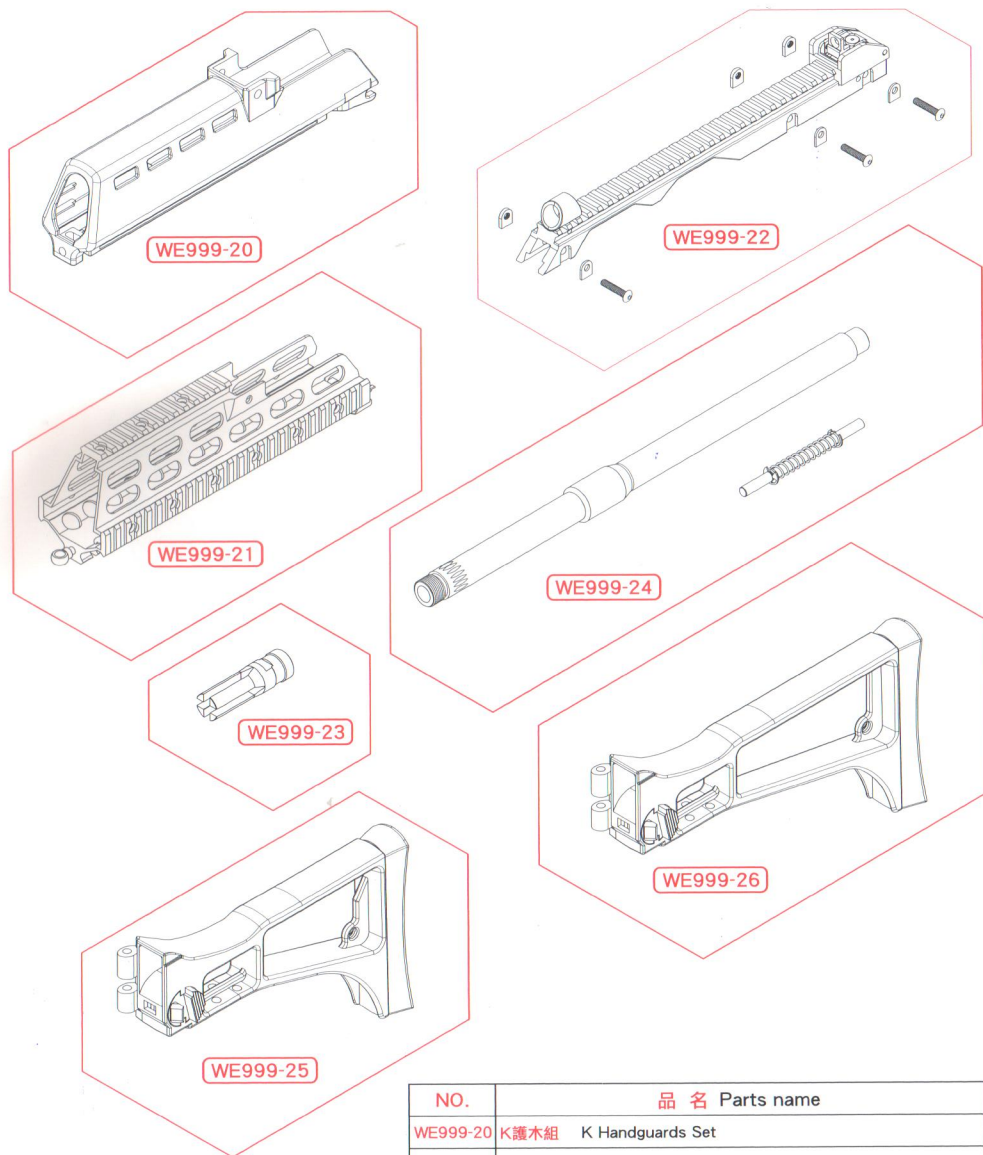

| NO. | 品名 Parts name |
|----------|---------------------------|
| WE999-20 | K護木組 K Handguards Set |
| WE999-21 | RAS護木組 RAS Handguards Set |
| WE999-22 | 瞄具軌道組 Sight Rail Set |
| WE999-23 | K防火帽 K Flash Hider |
| WE999-24 | K槍管組 K Barrel Set |
| WE999-25 | C後托組 C Rear Stock Set |
| WE999-26 | K後托組 K Rear Stock Set |

10. 故障診斷

TROUBLE CLINIC

| 狀況 SYMPTOM | 原因 CAUSE | 處理方式 ACTION |
|---|---|--|
| 無法作動 No operation at all | 選擇鈕設定在SAFE的位置 Selector lever set to SAFE. | 將選擇鈕切換到半自動或全自動 Set the selector to AUTO or SEMI. |
| | 電池沒電 Battery is dead. | 電池充電 Charge the battery. |
| | 電池接頭脫離 Battery connector is disconnect. | 接頭確實接牢 Connect the connector. |
| | 馬達標準壽命已到(約5萬發) (about 5 million rounds) | 更換馬達 Replace the motor. |
| 馬達有動作卻不能擊發 Motor is revolving but gun doesn't work | 保險絲燒毀 Fuse is blown out. | 更換保險絲 Replace the fuse. |
| | 齒輪或內部零件損壞 Gear or internal components of damage. | 請至專賣店維修 Purchase the replacement parts from the dealer. |
| | 彈匣卡彈 Bullets are clogged in the magazine. | 請輕拍彈匣並使用高品質BB彈 Shake the magazine and use high quality BB bullets. |
| 單發不正確 Malfunction of semi auto | 槍膛卡彈 Bullets are clogged in the chamber. | 使用通槍條通出BB彈 Using the cleaning rod to remove the bullet. |
| | 齒輪正時未對準 Deviation in gear timing. | 切換至連發射擊2~3秒後再切回單發 Firing 2 ~3 sec in the full auto mode and then return to the semi auto. |
| 連發不正確 Malfunction of full auto | 單連發撥桿損壞 Cut off lever damage. | 請至專賣店維修 Purchase the replacement parts from the dealer. |
| | 齒輪正時未對準 Deviation in gear timing. | 切換至單發射擊2~3發後再切回連發 Firing 2 ~3 shots in the semi auto mode and then return to the full auto. |
| 連發速度變慢 Firing circle slow | 單連發撥桿損壞 Cut off lever damage. | 請至專賣店維修 Purchase the replacement parts from the dealer. |
| BB彈飛行距離變短或未擊發時由槍口掉落 Shooting distance becomes shorter or not fired when falls by the muzzle. | 電池即將沒電 Deviation in gear timing. | 電池充電 Charge the battery. |
| | 上旋系統未調整 Hop-Up system unadjusted. | 調整上旋系統 Adjusted the hop-up. |
| 作動聲音異常 Overly loud operating noise . | BB彈不良 Faulty BB bullets. | 請使用高品質BB彈(勿使用回收彈) Please use high quality BB bullets. (Do not use the recycling bullets) |
| | 活塞O環磨損 The piston o-ring worn off. | 請至專賣店維修 Purchase the replacement parts from the dealer. |
| 作動聲音異常 Overly loud operating noise . | 齒輪或內部零件損壞 Gear or internal components of damage. | 請至專賣店維修 Purchase the replacement parts from the dealer. |