

**彈匣卡筭** Ambidextrous Magazine Release



左側使用彈匣卡筭(壓下彈匣卡筭,彈匣即脫落)  
Push the magazine release button on left side for left hand shooter.



右側使用彈匣卡筭(壓下彈匣卡筭,彈匣即脫落)  
Push the magazine release button on right side for right hand shooter.


**射擊選擇鈕** Ambidextrous Fire Selector



左側位置  
The selector button on left side for left hand shooter.



右側位置  
The selector button on right side for right hand shooter.

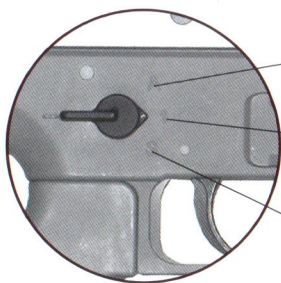

- 全自動射擊模式  
Full-Auto Mode
- 半自動射擊模式  
SEMI-Auto Mode
- 保險模式  
Safty Mode

**爆炸圖**  
EXPLOSION

