INSTRUCTION MANUAL

GC16-300BOT











MAINTENANCE



Remove the magazine.



Return the hop up dial to normal position and insert the cleaning rod from the lead edge of the inner barrel. remove clogged pellets.



Be aware to have the rod facing down and reaching to the end, and

FRONT SIGHT ADJUSTMENT



Front Sight - Flip up



Front Sight - Press the button and Fold down

PARTS LIST

GC16 300BOT 01 Dummy gas tube GC16 300BOT 02 Gear box GC16 300BOT 03 Barrel set

GC16 300BOT 04 wire

GC16 300BOT 05 Magazine

GC16 300BOT 06 Upper Receiver Set GC16 300BOT 07 Lower Receiver Set

GC16 300BOT 08 Rail system set

GC16 300BOT 10 Front Sight

GC16 300BOT 09 Grip

GC16 300BOT 14 Inner barrel set GC16 300BOT 15 Rear Sight GC16 300BOT 16 Grip Bottom plate GC16 300BOT 17 Flash Hider

GC16 300BOT 13 Butt stock set

GC16 300BOT 12 Charging handle set

GC16 300BOT 18 Stock Tube

GC16 300BOT 11 Motor

GC16 300BOT 19 Sling Swivel Mount

RETRACTABLE STOCK



Press the stock release lever to unlock.



Adjust the position (6 position).

REAR SIGHT ADJUSTMENT



Rear Sight - Flip up



Elevation knob (up / down adjustment)



Windage knob (left / right adjustment)

TROUBLE SHOOTING

SYMPTOM	POTENTIAL	CORRECTIVE
No operation at all	Selector lever is set to safety.	Set the selector lever to Semi.
	Battery is not charged.	Charge the battery.
	Battery connector is disconnected.	Attach the connector.
	Battery connectors (and) are reversed.	Connect the connector correctly(check the fuse)
	Motor life expired (50,000 to 60,000 rounds) or poor electrical connection.	Replace the dead motor (can be purchased from local dealer or directly G&G). Check and repair the contacts.
Although motor is revolving, no pellet can be fired	Pellets are clogged inside the magazine.	Insert the charging rod into the magazine and move up and down a few times to remove clogged pellets.
	Pellets are clogged in the chamber.	Remove clogged pellets by using the cleaning rod.
	Faulty gear.	Pruchase the replacement gear from your dealer or G&G and repair.
Shooting distance becomes shorter	Damaged or worn chamber set.	Mount the replacement parts(Purchasing from your dealer or G&G).
	Damaged or worn piston set (O-ring,piston spring).	
	Something is jammed in the inner barrel.	Use the cleaning rod and clean the inner barrel.
	Faulty BB pellets (too small or heavy).	Use the genuine G&G Pellets.
	Shrotage of silicone oil.	Drops few drops of silicone oil from upper the chamber.
	Gear problem caused by too many blank firing.	Consult your dealer or G&G for overhaul maintenance, part replacement (gear,etc.) or repair.
Too loud operating noise	Worn or damaged gear.	
	Gear problem caused by too many blank firing.	
Pellets being fallen out from barrel end	Damaged or worn chamber set.	
	No hop setting.	Turn the hop adjustment lever toward Hop.
	Faulty BB Pellets (too small or heavy).	Use the G&G Pellets.
If gun gets wet	Stop operation immediately, disconnect the battery, wipe off water from inside the main body and the battery. After completely dry, carry out trial firing. If the unit is not operational, please contact your local dealer for repair.	

Sales Dept. | sales@guay2.com , b2b@guay2.com Technology Support Dept. | support@guay2.com PR Dept. pr@guay2.com

Chang Hua | Tel: +886-4-798-9000 Fax: +886-4-798-9900 No.999, Zhonghua Rd. Shengang Township, Headquarter Changhua County 50955, Taiwan (R.O.C.)

Taipei | Tel : +886-2-2692-2000 | Fax : +886-2-2692-4000 11F-3., No.27, Lane 169, Kangning St. Shijr City, Taipei County 22180, Taiwan (R.O.C.)

- You may purchase all of the groups' parts from G&G support Dep.
- support@guay2com

