
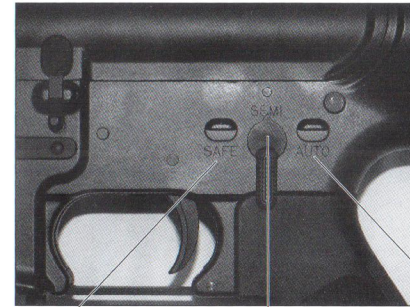



爆炸圖 EXPLOSION

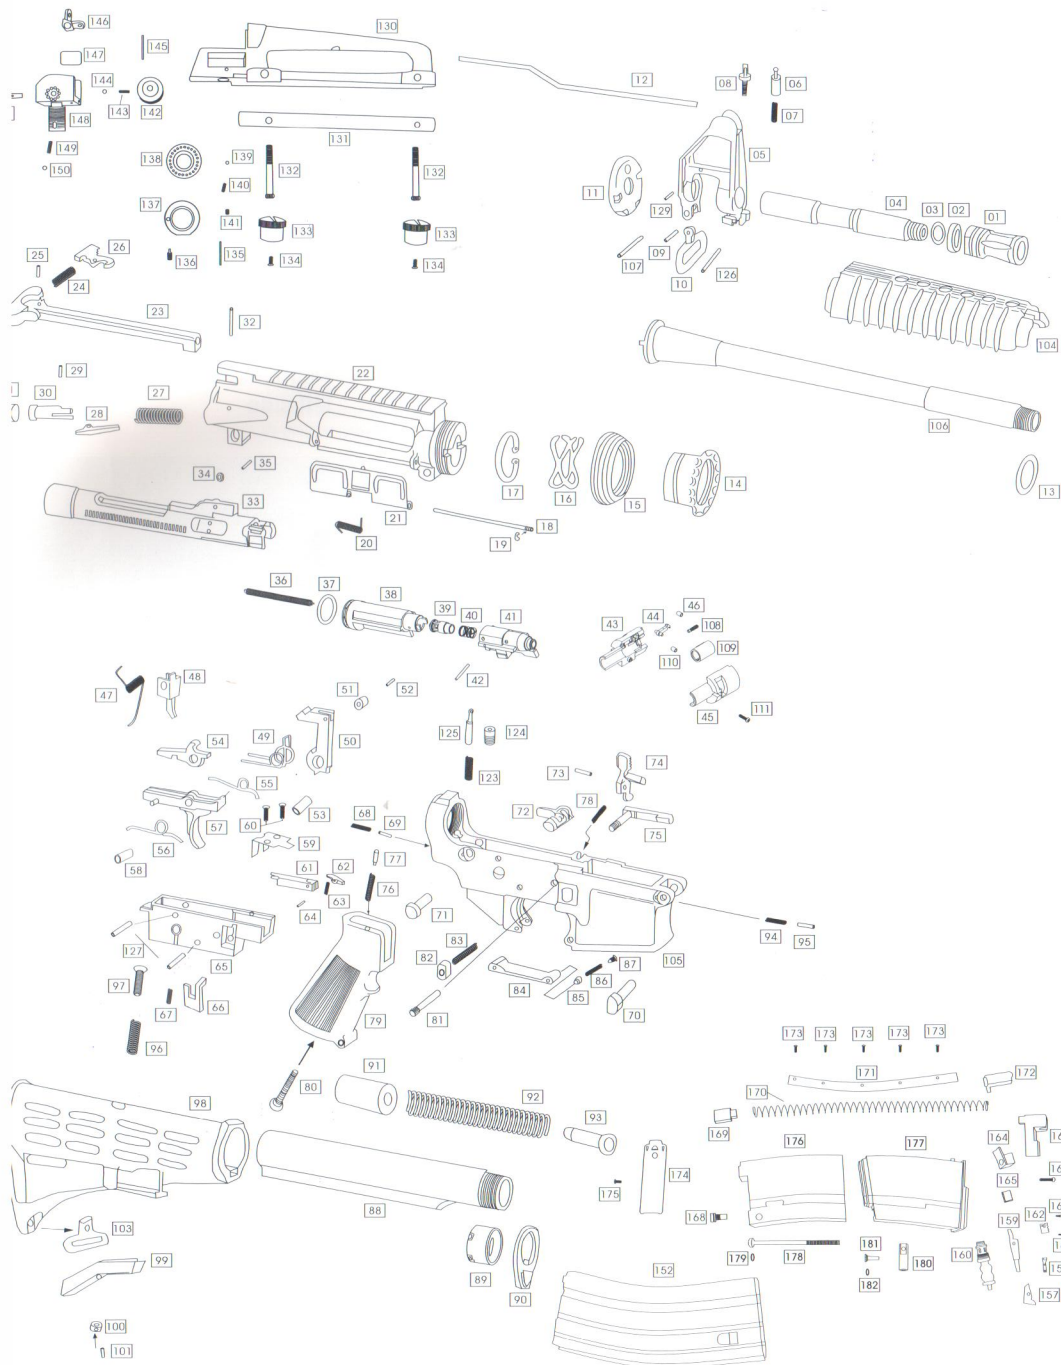



保險控制
Safe control

半自動控制
Semi-automatic control

自動控制
automatic control

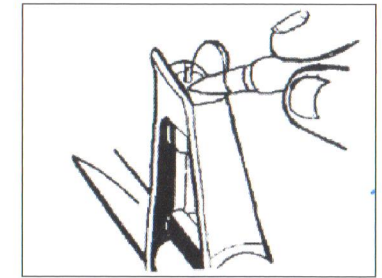

準星的調整
To adjust front sight

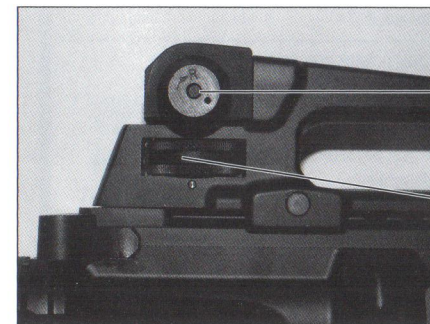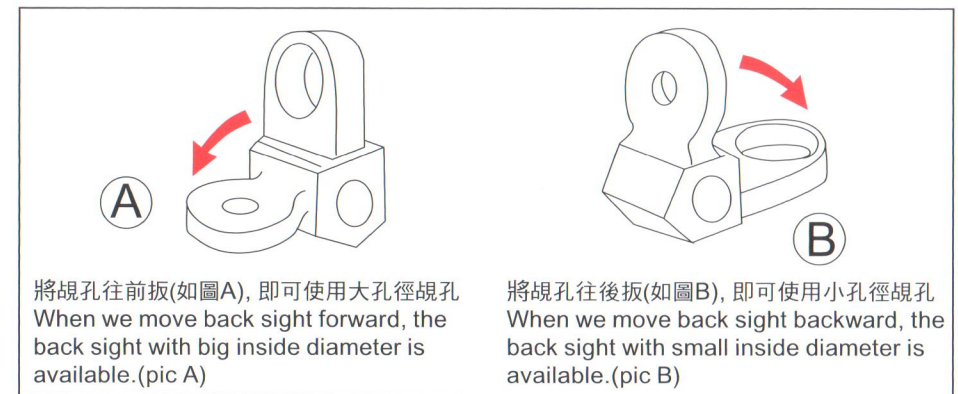

將覘孔調整鈕往順時鐘或逆時鐘, 即可左移或右移覘孔
Turn adjusting knob counterclockwise or clockwise to move backsight left or right.

將覘孔調整鈕往順時鐘或逆時鐘, 即可向上或向下覘孔
Turn adjusting knob counterclockwise or clockwise to move backsight up or down.