

彈匣卡筭 Ambidextrous Magazine Release



左側使用彈匣卡筭(壓下彈匣卡筭,彈匣即脫落)
Push the magazine release button on left side for left hand shooter.



右側使用彈匣卡筭(壓下彈匣卡筭,彈匣即脫落)
Push the magazine release button on right side for right hand shooter.


射擊選擇鈕 Ambidextrous Fire Selector



左側位置
The selector button on left side for left hand shooter.



右側位置
The selector button on right side for right hand shooter.

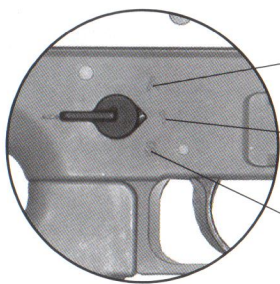

全自動射擊模式
Full-Auto Mode

半自動射擊模式
SEMI-Auto Mode

保險模式
Safty Mode

爆炸圖 (OPEN-BOLT)
EXPLOSION

